


# Operation manual

**DHGF-2 / -4**

**Impeller-Flowmeter**

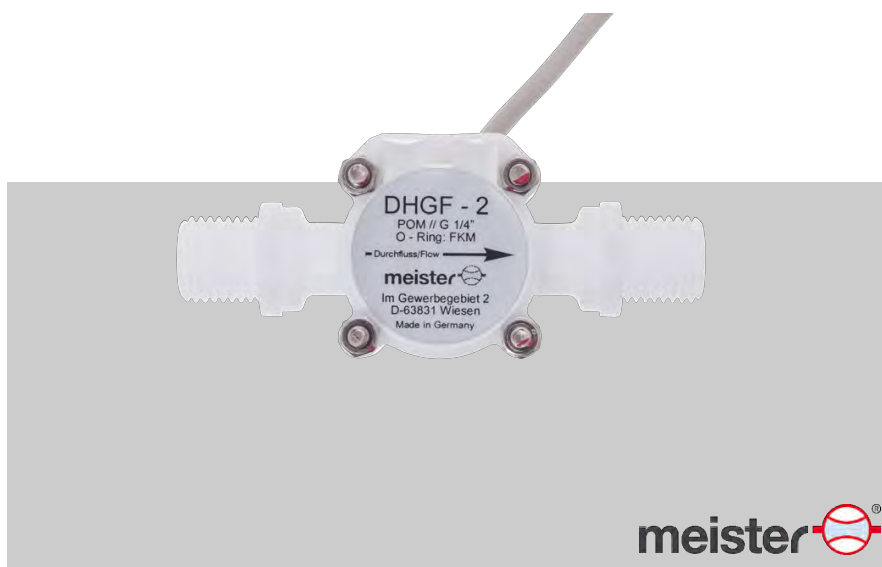

Series DHGF

Type DHGF -2 and -4

Read this manual prior to performing any task!

Meister Strömungstechnik GmbH  
Im Gewerbegebiet 2  
63831 Wiesen  
Telephone: +49 6096 9720 - 0  
Fax: +49 6096 9720 - 30  
E-mail: [sales@meister-flow.com](mailto:sales@meister-flow.com)  
Internet: [www.meister-flow.com](http://www.meister-flow.com)

DHGF -2-4 .01, 1, en\_US

These operating instructions were compiled by:  
Meister Strömungstechnik GmbH  
Subject to change without notice

© Meister Strömungstechnik GmbH 2017

These instructions facilitate the safe and efficient handling of a flowmeter (referred to as "device" in the following). The instructions are an integral part of the device and must be kept within easy reach for the personnel in the immediate vicinity of the device at all times. Personnel must carefully read and understand these instructions before commencing all work. The basic requirement for safe work is adherence to all safety and handling instructions stipulated in these instructions. The local accident-prevention regulations and general safety standards and regulations for the field of application of the device also apply. Illustrations in these instructions are provided to aid general understanding and might deviate from the actual model. No claims can be derived from any such differences.

### **Limitations of liability**

All details and instructions in this manual have been compiled under consideration of the valid standards and regulations, the current state-of-technology and our many years of knowledge and experience. The manufacturer does not accept any liability arising from:

- non-observance of any details in these instructions
- improper use of the device, or use that is not in accordance with these instructions
- use of non-trained personnel
- unauthorized retrofitting or technical changes that have not been authorized by the manufacturer
- use of non-approved replacement parts

The duties and obligations agreed upon in the delivery contract apply in full, as well as the general terms and conditions, the terms of delivery by the manufacturer and the valid legal regulations applicable at the conclusion of the contract.

### **Copyright**

These operating instructions are protected by copyright.

Except for internal purposes, transfer of these instructions to third-parties, copying them in any way – even in part – as well as dissemination and/or communication of their content is forbidden without prior written authorization from Meister Strömungstechnik ("manufacturer"). Violations are subject to claims for indemnification. The manufacturer reserves the right to assert additional claims.

Copyright is the property of the manufacturer.

© Meister Strömungstechnik GmbH

Im Gewerbegebiet 2

63831 Wiesen

Germany

## Table of contents

<b>1</b>	<b>Overview</b> .....	<b>6</b>
	1.1 Short description.....	6
	1.2 Warranty and guarantee provisions.....	6
	1.3 Customer service.....	6
<b>2</b>	<b>Safety</b> .....	<b>7</b>
	2.1 Explanation of symbols.....	7
	2.2 Correct use in accordance with these instructions.....	8
	2.3 Special precautions.....	9
	2.3.1 Hazards from electrical current.....	10
	2.3.2 Mechanical hazards.....	10
	2.3.3 Hazards from high or low temperatures.....	11
	2.3.4 Radiation hazards.....	11
	2.3.5 Hazards caused by media.....	12
	2.4 Personnel requirements.....	12
	2.5 Personal safety equipment.....	13
	2.6 Protective systems.....	14
	2.7 Environmental protection.....	14
	2.8 Responsibility of the owner.....	15
<b>3</b>	<b>Design and function</b> .....	<b>17</b>
	3.1 Overview.....	17
	3.2 Device description.....	17
<b>4</b>	<b>Transport, packaging and storage</b> .....	<b>19</b>
	4.1 Safety instructions for transport.....	19
	4.2 Transport inspection.....	19
	4.3 Packaging.....	19
	4.4 Symbols on the shipping box.....	20
	4.5 Storage.....	20
<b>5</b>	<b>Installation and initial startup</b> .....	<b>21</b>
	5.1 Safety.....	21
	5.2 Requirements at the place of installation.....	21
	5.3 Preparatory work.....	22

5.4	Installation in the pipe system.....	24
5.5	Initial startup.....	25
5.6	Electrical connection.....	25
5.6.1	Connection diagram.....	27
<b>6</b>	<b>Operation.....</b>	<b>29</b>
6.1	Adjusting the measuring range.....	29
6.2	Pulse characteristics.....	30
<b>7</b>	<b>Troubleshooting.....</b>	<b>31</b>
7.1	Safety.....	31
7.2	Troubleshooting guide.....	32
<b>8</b>	<b>Maintenance.....</b>	<b>33</b>
8.1	Maintenance table.....	33
<b>9</b>	<b>Disassembly and disposal.....</b>	<b>35</b>
9.1	Safety.....	35
9.2	Removal from the pipe system.....	35
9.3	Disassembly.....	36
9.4	Disposal.....	37
9.5	Return Materials.....	37
9.5.1	Return Materials Authorization.....	37
<b>10</b>	<b>Technical data.....</b>	<b>38</b>
10.1	General specifications.....	38
10.1.1	Installation data .....	39
10.2	Pulse characteristics.....	39
10.3	Device data plates.....	40
10.4	Dimension sheet.....	41
<b>11</b>	<b>Annex.....</b>	<b>42</b>
11.1	Sealant.....	42
<b>12</b>	<b>Index.....</b>	<b>43</b>

# 1 Overview

## 1.1 Short description



Fig. 1: Flowmeter DHGF-2 / -4

Flowmeters of the series DHGF measure the flow by using an impeller, which has been fitted with magnets. The rotational speed of the impeller is sampled with a Hall sensor and converted by the integrated electronics into evaluable electric current.

## 1.2 Warranty and guarantee provisions

Warranty and guarantee provisions are contained in the general terms and conditions of the manufacturer.

## 1.3 Customer service

For technical support, please contact our customer service department (for contact details, see Page 2).

Furthermore, our staff is always interested in receiving new information and experiences gained from application of the device, which may be useful in improving our products.

## 2 Safety

This chapter provides an overview of important safety aspects required for optimum protection of personnel as well as for safe installation and safe operation of the device.

Non-observance of the handling and safety instructions listed in this manual may result in hazardous/dangerous conditions and in damage to property.

### 2.1 Explanation of symbols

#### Safety instructions

Safety instructions in this manual are marked by symbols. The safety instructions are preceded by signal words that indicate the level of danger/hazard.

To prevent accidents or injury to persons as well as damage to property, always observe the safety instructions and proceed carefully.

 **DANGER**

**This combination of symbol and signal word indicates an immediate, dangerous condition that results in death or serious injury if it is not avoided.**

 **WARNING**

**This combination of symbol and signal word indicates a possibly dangerous condition that might result in death or serious injury if it is not avoided.**

 **CAUTION**

**This combination of symbol and signal word indicates a possibly dangerous condition that might result in minor or slight injury if it is not avoided.**

**NOTICE**

**This combination of symbol and signal word indicates a possibly dangerous condition that might result in damage to property and to the environment if it is not avoided.**

### Tips and recommendations



*This symbol emphasizes useful tips and recommendations as well as information for efficient and failure-free operation.*

### Signs used in these instructions

The following signs and highlightings are used in these instructions to identify handling instructions, the description of results, lists/enumerations, references and other elements:

- ➔ Designates step-by-step handling instructions
- ⇒ Designates a state or an automatic sequence as a result of a specific operating step
- Designates randomly ordered enumerations and list entries
- 🔗 “Signs used in these instructions” on page 8, designates references to chapters in these instructions

## 2.2 Correct use in accordance with these instructions

The device has been designed and constructed solely for the correct use in accordance with these instructions.

**⚠ DANGER**

**The Fahrenheit and PSI measurement units in these operating instructions have been rounded down for easier readability! Always refer to the metric units for calculations and dimensioning of e.g. the pipe system!**

*Table 1: Correct use in non-hazard areas*

The flowmeter serves exclusively to monitor the continuous flow of liquids within a temperature range of 0 °C to 80 °C / 32 °F to 175 °F at a maximum operating pressure of 10 bar / 144 psi.

### Correct use in explosion-hazard zones

**⚠ DANGER**

**This device is not certified for the use in explosion-hazard zones!**



**⚠ WARNING**

**Danger due to incorrect use!**

- Use the flowmeter only within the stipulated performance limits
- Do not subject the flowmeter to severe temperature fluctuations
- Do not use the flowmeter with quick-acting valves
- Do not use the flowmeter with solenoid valves
- Do not subject the flowmeter to vibrations
- Do not subject the flowmeter to pressure surges
- Do not use the flowmeter with media containing solids or abrasives
- Use the flowmeter only with media previously approved by the manufacturer
- Do not use the flowmeter as the sole monitoring device to prevent dangerous conditions
- Do not install the flowmeter as a load bearing part within a pipeline system

**Incorrect use of the flowmeter may result in dangerous conditions**

All claims for damages due to incorrect usage are excluded.

## 2.3 Special precautions

The following section lists residual risks that might arise from the device.

**⚠ WARNING**

**To reduce health risks and prevent dangerous conditions, observe the safety instructions listed here as well as the safety instructions in the other chapters of these operating instructions.**



*These operating instructions cannot cover all conceivable dangers because many dangers arise, not from the device itself, but from the respective media flowing through it. Always observe the appropriate safety data sheets when using hazardous media!*

## 2.3.1 Hazards from electrical current

### Electrical current

#### DANGER

**Danger to life from electrical current!**

- Only qualified electricians shall work on the electrical system.
- If the insulation is damaged, immediately switch off and have repairs performed.
- Before commencing work on live parts of the electrical systems and operating equipment, disconnect the equipment and ensure that it remains disconnected for the duration of the work. Observe these 5 safety rules when doing so:
  - Isolate (disconnect)
  - Secure against switching back on
  - Check for absence of voltage
  - Ground and short
  - Cover or cordon off other live parts in the vicinity
- Never bridge fuses or put them out of operation. Always observe the correct current ratings when replacing fuses
- Keep moisture away from live parts. This can result in short-circuit

There is an immediate risk to life from electrocution on touching live parts. Damaged electrical insulation or components can be extremely dangerous.

## 2.3.2 Mechanical hazards

#### WARNING

**Risk of injury due to fractured housing and leakage!**

- Keep within the stipulated operating conditions
- Wear personal protective equipment
- Avoid severe temperature fluctuations
- Avoid pressure surges

Unauthorized temperatures or excessive pressure may cause the flowmeter body or the process connections to burst. Injuries may be caused by flying parts and escaping media.

#### CAUTION

**Risk of injury on sharp edges and pointed corners!**

- Proceed with caution when working near sharp edges and pointed corners
- If in doubt, wear protective gloves

Sharp edges and pointed corners can cause abrasions and skin cuts

### 2.3.3 Hazards from high or low temperatures

Hot or cold surfaces

**▲ WARNING**

Risk of injury from hot or cold surfaces!

- Always wear temperature-resistant protective work clothing and protective gloves when working near hot/cold surfaces
- Before commencing work, make sure that all surfaces have been cooled down or warmed up to ambient temperature

Surfaces of components may heat up/cool down dramatically due to the media flowing through them. Skin contact with hot or cold surfaces may cause severe skin burn or frostbite.

### 2.3.4 Radiation hazards

Strong magnetic fields

**▲ WARNING**

Danger to life from strong magnetic fields!

- Persons with pacemakers must not be located in the vicinity of the device. This could impair the function of the pacemaker
- Persons with metal implants must not be located in the vicinity of the device. Implants can heat up or be attracted magnetically
- Keep ferromagnetic materials and electromagnets away from the magnetic source. These materials could be attracted and fly through the room, thereby injuring or even killing persons. Minimum clearance: 3 m
- Remove and put away metal objects before maintenance work (jewelry, watches, writing implements, etc.)
- Do not place any electronic devices within the vicinity of the magnetic source. These could be damaged
- Do not place any electronic storage media, credit cards, etc. within the vicinity of the magnetic source. Data could be deleted

Strong magnetic fields may cause severe injury or even be fatal, as well as cause considerable damage to property.

## 2.3.5 Hazards caused by media

### Hazardous media

#### WARNING

#### Risk of injury from hazardous media!

- Observe details in the safety data sheet of the media
- Comply with the safety, accident prevention and environmental protection regulations appropriate to the media used
- Wear personal protective equipment in accordance with the safety data sheet

If the flowmeter is used for toxic, corrosive or very hot/cold media, there is a risk of serious injury from escaping media.

## 2.4 Personnel requirements

#### WARNING

#### Risk of injury due to insufficiently trained and qualified personnel!

- All work must be performed by qualified personnel only.
- Keep unqualified personnel away from hazard zones.

If unqualified personnel work on the device or are located within its hazard zone, dangers arise which may result in serious injury and considerable damage to property.

Authorized personnel is to be restricted to those persons who can be expected to perform their work reliably. Persons whose ability to respond is influenced, e.g. by drugs, alcohol or medication, are not authorized.

Observe the age and occupational regulations at the site when choosing personnel.

The following lists the personnel qualifications for the various areas of activity:

#### Qualified electrician

Due to specialized training, knowledge and experience as well as knowledge of the relevant standards and regulations, the qualified electrician is able to independently perform work on the electrical systems as well as to detect and avoid possible risks and dangers.

Additionally, the electrician must provide proof of his/her professional qualification that certifies his/her ability to perform work on electrical systems.

The qualified electrician must fulfill the requirements contained in the valid legal accident-prevention regulations.

#### Qualified personnel

Due to their specialized training, knowledge and experience as well as their knowledge of the relevant standards and regulations, qualified personnel are able to independently perform the work assigned to them as well as to detect and avoid possible risks and dangers.

## 2.5 Personal safety equipment

Personal safety equipment is used to protect personnel from hazards/dangers that might impair their safety or health during work.

When performing the various tasks at, and with the device, personnel must wear personal safety equipment. Special reference is made of this in the individual chapters within these Operating Instructions. The following provides a description of the personal safety equipment:

- Always wear appropriate personal safety equipment required in the various chapters of these Operating Instructions before commencing work.
- Comply with the personal safety equipment instructions posted within the work area.

### Description of personal safety equipment

#### Additional protective equipment must be worn when handling hazardous media!

As specified in the Safety Data Sheet of the medium, **protective equipment** must be worn when handling hazardous media. In addition, the specifications of the system operator must be followed. If no protective equipment is specified, suitable protective gloves and goggles must be worn.

The protective equipment is used to protect against hazardous media leaks and hazardous media residue in the device.

### Goggles



The goggles are used to protect the eyes from flying debris and splashing fluid.

### Protective gloves



Protective gloves protect the hands from friction, burns, grazing, abrasion, surface cuts or deeper injuries, as well as from direct contact with hot or cold surfaces.

## 2.6 Protective systems

### Integration within an emergency-stop concept is required

The device is designed for use as a part of a machine or system. It does not have its own controller and does not have an autonomous emergency-stop function.

Before starting up the device, install the emergency-stop equipment and incorporate it into the safety chain of the machine or system.

Connect the emergency-stop equipment so that if there is an interruption in the power supply or in the activation of the power supply after an interruption, dangerous conditions are excluded for persons and valuables.

The emergency-stop equipment must always be freely accessible.

## 2.7 Environmental protection

### NOTICE

**Risk to the environment due to improper handling of environmentally hazardous substances!**

- **Always observe the instructions listed below on the handling and disposal of substances harmful to the environment.**
- **If harmful substances are released into the environment, take immediate countermeasures. If there is doubt, contact the local authorities, inform them of the damage and request information on suitable countermeasures to be taken.**

**Serious environmental damage may result if substances harmful to the environment are handled incorrectly, especially if they are disposed of improperly.**

### Cleaning fluids

Solvent-based cleaning fluids contain toxic substances. They must never be released into the environment and must be disposed of by a waste management company.

## 2.8 Responsibility of the owner

### Owner

The owner is the person who operates the device himself for business or commercial purposes or who cedes such use/application to a third-party and who, during operation of the device, has full legal product stewardship for protection of the user, the personnel or third-parties.

### Duties of the owner

The device is used in the commercial sector. The owner of the device is therefore subject to legal obligations pertaining to work safety.

In addition to the safety instructions contained in these Operating Instructions, the safety, accident prevention and environmental protection regulations applicable to the field of application of the device must be observed.

In particular, this includes:

- The owner must inform himself regarding the valid health and safety regulations and must perform a risk assessment to additionally determine the risks resulting from the special work conditions arising at the location at which the device is used, especially in regard to the media used. He must then implement these within Operating Instructions for use of the device.
- **For the USA:**
  - The "Occupational Health and Safety Act" of 1970 stipulates that it is the duty of the owner to provide a safe workplace. He must hereby ensure that the device is operated and maintained compliant to valid commercial, industrial, local, federal and state laws, standards and regulations.
- **For Canada:**
  - The "Canadian Centre for Occupational Health and Safety Act" of 1978 stipulates that all Canadians have "...a fundamental right to a healthy and safe working environment." It is therefore the duty of the owner to provide a safe workplace. He must ensure that the device is operated and maintained compliant to valid commercial, industrial, local, provincial, territorial and federal laws, standards and regulations.
  - Appropriate to the working conditions and the media used, the owner must affix signs within the working area that inform the user of the hazards and dangers present.
  - During the entire period of use of the device, the owner must check periodically to ensure that the Operating Instructions correspond to the current state of regulations, and he must make adjustments as necessary.
  - The owner must clearly regulate and determine responsibilities for installation, operation, troubleshooting, maintenance and cleaning.
  - The owner must fit/retrofit suitable safety equipment within the complete plant/system.

- The owner must ensure that all staff/personnel have thoroughly read and understand these instructions before handling the device. Additionally, he must train the personnel at regular intervals and warn them of dangers.
- The owner must provide the personnel with the required safety equipment and must instruct them that its wear is mandatory.

Additionally, the owner is responsible for ensuring that the device is always kept in a technically perfect condition. The following therefore applies:

- The owner must implement suitable safety measures, appropriate to the media used.
- Different media have different severities of influence on the soiling and wear of/to the device. The owner must set suitable maintenance intervals, depending on the media flowing through the device.
- The owner must ensure that the maintenance intervals described in these Operating Instructions are adhered to at all times.
- The owner must ensure that the device is completely free of all residual media before disposal. Remains of corrosive or toxic materials must be neutralized.



## 3 Design and function

### 3.1 Overview

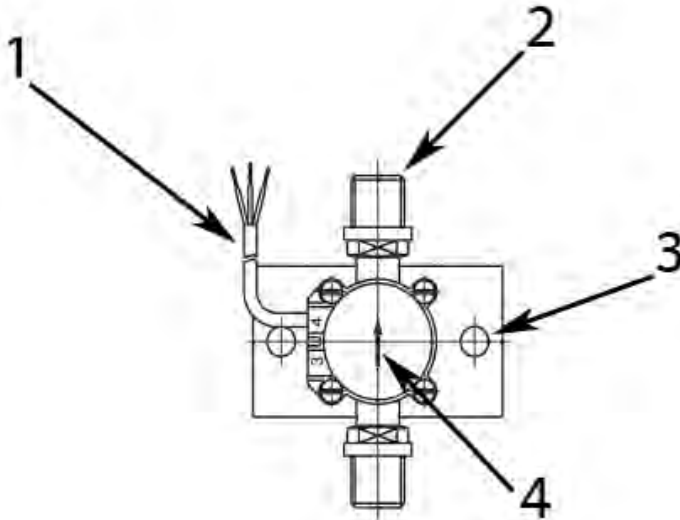


Fig. 2: Front view

- 1 Connecting cable
- 2 Process connection (outlet)
- 3 Mounting plate (Plate is standard on ECTFE models and optional on POM)
- 4 Flow direction of the medium

### 3.2 Device description

Flowmeters of the series DHGF measure the flow by using an impeller, which has been fitted with magnets. The rotational speed of the impeller is sampled with a Hall sensor and converted by the integrated electronics into evaluable electric current. The flowmeter is installed into a pipeline and measures the flow of the medium through the pipeline.

Range of applications for the DHGF-flowmeters include engineering, pharmaceutical industry, chemical industry as well as research & development.

Table 2: Operating data

<b>Operating pressure</b>	10 bar / 144 psi
<b>Burst pressure (22°C / 71 °F)</b>	> 30 bar / 434 psi
<b>Operating temperature</b>	0 °C - 80 °C / 32 °F - 175 °F
<b>Measuring accuracy</b>	± 2 % of measured value <sup>(1)</sup>
<b>Repeatability</b>	< ± 0,8 % of measured value <sup>(1)</sup>
<b>Viscosity range</b>	1 - 10 cSt
<b>Sensing principle</b>	Hall effect, contact-free measuring technique

<sup>(1)</sup>Under the same operating conditions

Table 3: Measuring ranges (for H<sub>2</sub>O at 22 °C / 71 °F)

Type	l/h	Version
DHGF-2	1,5 - 100	POM
DHGF-2	1,5 - 100	ECTFE
DHGF-4	6 - 250	POM
DHGF-4	6 - 250	ECTFE

## 4 Transport, packaging and storage

### 4.1 Safety instructions for transport

#### Improper transport

#### NOTICE

**The device could be damaged if transported improperly!**

- Proceed carefully when unloading transported packages, both on delivery and when transporting in-house. Observe the symbols and instructions on the shipping box
- Remove packaging material just prior to assembly

**Objects to be transported may fall or overturn if transported improperly. This may result in damage to the device and/or property.**

### 4.2 Transport inspection

On delivery, make an immediate check for completeness and check for transport damages.

If there are any visible external transport damages, proceed as follows:

- Do not accept the delivery
- Note the damage in the shipping documents or on the delivery note of the transporter and have the driver confirm by signature
- Initiate a claim for damages



*Make a claim for each fault as soon as it is detected. Claims for damages can only be invoked within the valid claim periods.*

### 4.3 Packaging

#### About packaging

The packaging serves to protect the individual components from transport damages, corrosion and other damages until they are installed. Do not discard the packaging and only remove the device from the shipping box immediately before installation.

#### Handling packaging materials

Dispose of packaging material in accordance with the valid legal regulations and local ordinances.

**NOTICE**

**Danger to the environment due to incorrect disposal!**

- **Dispose of packaging material in an environmentally safe manner**
- **Comply with the local disposal regulations. If necessary, have the packaging disposed of by approved specialists.**

**Packaging is made of valuable raw materials and can be reused in many cases or usefully processed and recycled. Improper disposal of packaging materials may pose a danger to the environment.**

## 4.4 Symbols on the shipping box

Top



The arrows indicate the top side of the package. They must always point upwards, otherwise the content may be damaged.

**Fragile**



Designates packages with breakable or damageable contents.

Handle the package carefully and do not allow it to fall or be subjected to jarring or severe vibration.

## 4.5 Storage

**Storing the packages**

Store the packages under the following conditions:

- Do not store in the open
- Store dry and dust-free
- Do not subject to any aggressive media
- Protect from direct sunlight
- Avoid mechanical vibrations and shocks
- Storage temperature: 0 to 35 °C / 32 °F to 95 °F
- Relative humidity: max. 60 %
- Do not stack
- If storing for longer than 3 months, regularly check the general condition of all parts as well as of the packaging.



*Storage instructions in addition to the instructions listed here may be listed on the packages. Follow these instructions also.*

## 5 Installation and initial startup

### 5.1 Safety

Incorrect installation and initial startup

**⚠ WARNING**

Risk of injury due to incorrect installation and initial startup!

- Ensure that the site is sufficiently cleared of obstructions before commencing work
- Handle open or sharp edged components carefully
- Ensure that the assembly location is orderly and clean! Parts and tools lying about or on top of each other are potential causes for accidents
- Assemble components properly. Observe the stipulated tightening torque of screws
- Before initial startup, make sure that all installation work has been performed and completed in compliance with the specifications and instructions in these Operating Instructions

Incorrect installation and initial startup may result in severe injury and considerable damage to property.

Safeguard against restart

**⚠ WARNING**

Danger to life due to unauthorized restart!

- Before commencing work, switch off the power supply to the entire system/plant and secure against restart

There is a risk of severe or even fatal injury due to unauthorized restart of the power supply during installation.

### 5.2 Requirements at the place of installation

The place of installation must meet the following requirements:

- The device must not be under water.
- The surrounding area must be sufficiently illuminated.
- There must be sufficient space to prevent accumulation of trapped heat.
- The device must not be installed as a supporting part in a pipe construction.
- The device may not have anything affixed to, or suspended from it.
- The device must be installed in such a way as to preclude damage by outside force. It must be ensured that the flowmeter cannot be damaged. If necessary, install an appropriate impact protection device.

- External magnetic fields will influence the measurement electronics. Keep sufficient distance to magnetic fields (e.g. electric motors).
- Piping, process connections or supports made of ferromagnetic material influence the magnetic field of the device. Keep a space of minimum 100 mm to those materials (e.g. steel).

### 5.3 Preparatory work

The following requirements must be met during installation to ensure correct functioning of the flowmeter:

#### WARNING

#### Danger due to incorrect installation!

- Do not install the flowmeter as a supporting part in a pipe system
- Do not use the flowmeter with quick-acting valves
- Do not use the flowmeter with solenoid valves

If the requirements listed above are not observed when installing the flowmeter, dangerous/hazardous conditions may arise.

#### Air pockets / Cavitation

#### NOTICE

**Prevent air pockets and cavitation! The formation of air pockets and cavitations must be prevented by appropriate means. These can damage or destroy the flowmeter.**

#### Anti-freeze / anti-corrosive fluids

#### WARNING

**Damage caused by anti-freeze/anti-corrosive fluids**  
**Anti-freeze/anti-corrosive fluids have to be checked for compatibility prior to use! The manufacturer cannot be held liable for any damages caused by incompatibility of the anti-freeze/anti-corrosive fluids.**

#### Installation position / direction of flow

#### NOTICE

**The flowmeter can be mounted into the pipe system at any desired angle. However, the device is best vented when it is mounted upright. The medium must flow in the direction of the arrow.**

## Unimpeded flow sections

### NOTICE

**Measuring inaccuracy due to incorrect installation!**

- Ensure that the unimpeded flow sections are maintained
- Never reduce the pipe diameter immediately before the device

The measuring accuracy of the flowmeter is influenced by its position within the pipe system. Changes in cross-section, branch-offs or bends in the pipe system impair measuring accuracy.

- An unimpeded flow section of 10 x DN (rated width) must be maintained before the device.
- An unimpeded flow section of 5 x DN (rated width) must be maintained after the device.

## Unimpeded outlet

### NOTICE

**If the pipe system ends at an unimpeded outlet, the flowmeter must not be installed directly in front of the opening. The device must always be completely filled with media to ensure measuring accuracy.**

## Prepare the device

### NOTICE

**Risk of damage to property due to contamination!**

- Ensure that there are no foreign particles in the device
- Ensure that the device is not soiled
- Do not use any medium containing solids

**Contamination and deposits may impair the free movement of the impeller, thereby damaging the device.**



*Due to quality assurance measures, there may be some test medium (water) residue in the device.*

1. ➤ Unpack the device, remove the sealing caps at the inlet and outlet ends and visually inspect the device to ensure that it is free of packaging materials
2. ➤ Examine the device for residue of test medium and drain, if necessary
3. ➤ Check device for soiling and flush with clean medium, if necessary

## 5.4 Installation in the pipe system

### WARNING

Risk of injury from pressurized lines!

- Depressurize the pipe system before installing the device

If the pipe system is under pressure when installing the device, severe injury may result.

### WARNING

Risk of injury from hot or cold surfaces!

- Before commencing work, ensure that the system has been controlled to a temperature range between 0 and 40 °C
- Do not touch any parts of the system that are either very cold or very hot
- Always wear heat-resistant/cold-resistant protective work clothing and protective gloves when working near hot/cold surfaces

Pipelines can heat up/cool down dramatically due to the media flowing through them. Skin contact with hot or cold surfaces may cause severe skin burn or frostbite.

### WARNING

Risk of injury from media in the pipe system!

- Before installation, ensure that the pipe system is empty and does not contain any media residue
- Always wear personal protective equipment during installation
- Provide suitable draining devices (drip pans, collection tank, etc.)

If the pipe system contains toxic or other hazardous media, severe injuries may be caused by escaping media.

### NOTICE

Risk of damage to device due to contaminated pipe system!

- Ensure that the pipe system is clean before installing the device
- If necessary, flush the pipe system with clean medium before installation

Dirt and foreign particles entering the device can damage the device and impair its operation.


 
 






*A suitable sealant must be selected, depending on the condition/composition of the pipelines, the medium, as well as the operating and environmental conditions.*

## 5.5 Initial startup

The following steps must be taken before initial startup and any subsequent startup (e.g. after removal and installation during maintenance).

1.  **▲ WARNING!** Ensure that the plant is operating vibration-free. Vibrations could destroy the device. This may result in serious risk of injury to the user.
2.  **▲ WARNING!** Ensure that the medium is flowing continuously. Pulse-like staggered loads could destroy the device. This may result in serious risk of injury to the user.
3.  **NOTICE!** Completely fill the pipelines. Partial filling(s) may result in malfunctions and damage to the device.
4.  **NOTICE!** Vent the pipeline. If there are air pockets in the line during the measurement, this could result in damage to the device caused by hydraulic shock. This may cause malfunctions.
5.  **NOTICE!** Ensure that the plant is operating without cavitation. Cavitation may result in malfunctions and damage to the device.

## 5.6 Electrical connection

The electrical connection of the flowmeter is accomplished through the cast-on power cable leading from the housing.

**Personnel:**

- Qualified electrician

**⚠ DANGER**

**Danger to life from electrical current**

- Only qualified electricians shall work on the electrical system
- If the insulation is damaged, immediately switch off and have repairs performed.
- Before commencing work on live parts of electrical systems and components, disconnect the equipment and ensure that it remains disconnected for the duration of the work. Observe these 5 safety rules when doing so:
  - Isolate (disconnect)
  - Secure against switching back on
  - Check for absence of voltage
  - Ground and short
  - Cover or cordon off other live parts in the vicinity
- Never bridge fuses or put them out of operation. Always observe the correct current ratings when replacing fuses
- Keep moisture away from live parts. This may result in short-circuit

**There is an immediate risk to life from electrocution on touching live parts. Damage to the electrical insulation or single components can be extremely dangerous.**

### 5.6.1 Connection diagram

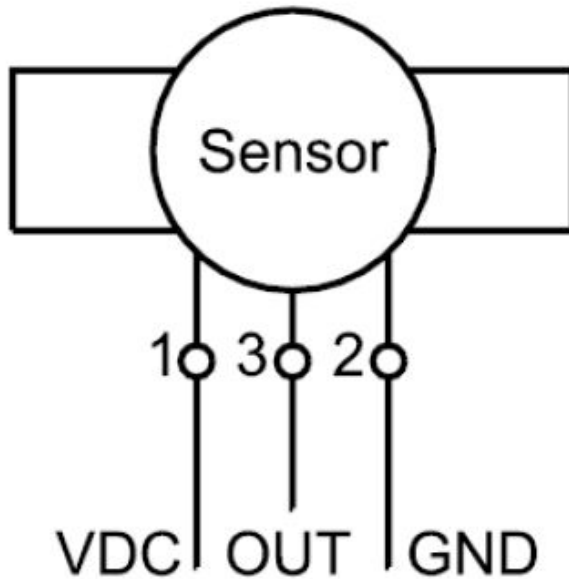


Fig. 3: Connection diagram

VDC white  
 GND brown  
 OUT green

#### 5.6.1.1 Electrical data

<b>Power supply</b>	4,5 - 24 V DC
<b>Output signal</b>	Square pulses / Push-pull output

<b>Max. output current</b> (at 24 V)	11 mA
<b>Electrical connection</b>	Round cable (1 m) 3 x 0,14mm <sup>2</sup> LIYY

## 6 Operation

### 6.1 Adjusting the measuring range

The flowmeter needs only to be installed according to the manual. Adjustments to measuring ranges or flow limits (upper and lower) are not possible. The electronics will produce square wave signals as soon as there is flow through the flowmeter.



***It is necessary to install suitable evaluation electronics to analyze the square wave signals generated by the measuring electronics in the flowmeter.***

## 6.2 Pulse characteristics

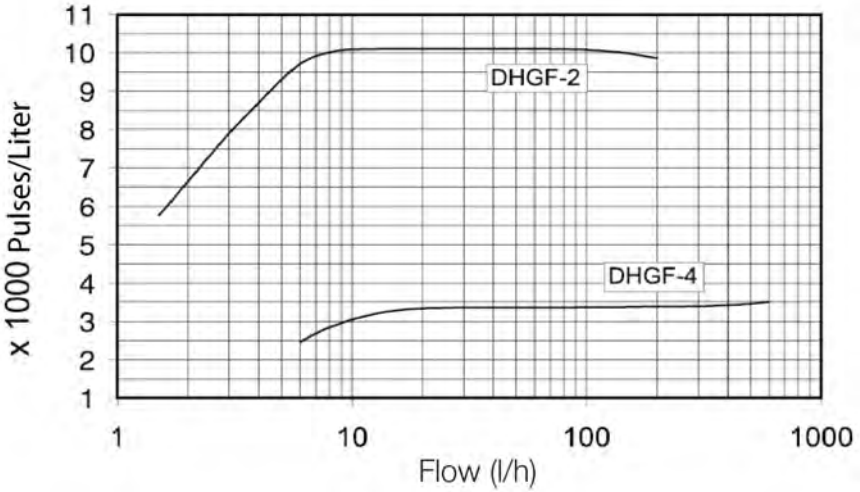


Fig. 4: Pulse characteristics

# 7 Troubleshooting

## 7.1 Safety

**Work performed incorrectly to remedy a malfunction**



**Risk of injury due to incorrect repair of malfunction!**

- Ensure that the site is sufficiently cleared before commencing work
- Ensure that the repair location is orderly and clean! Components and tools that are lying about or on top of each other are potential causes of accidents
- Before placing the device back into operation, ensure that all work has been performed and completed in compliance with the specifications and instructions in these Operating Instructions

**Work performed incorrectly may result in severe injury and considerable damage to property**

### Conduct in case of malfunction

The complete machine or system may be unsafe if there is a defect at the flowmeter (e.g. a burst housing).



The following always applies:

1. ➤ In case of malfunctions that present an immediate danger to persons or valuables, proceed according to the valid emergency plans for the system
2. ➤ Determine the cause of the malfunction
3. ➤ Before repair, ensure that there is no danger to persons from escaping media
4. ➤ If necessary, allow the pipeline and device to cool down or to warm up before commencing work
5. ➤ Malfunctions must be corrected by qualified personnel



*The following troubleshooting guide provides an indication of who is qualified to repair the fault.*

## 7.2 Troubleshooting guide

Fault description	Cause	Remedy	Personnel
No evaluable pulses are detected	Missing/ Faulty electrical connection	Connect the device correctly according to  <i>Chapter 5.6 "Electrical connection" on page 25</i>	Qualified electrician
No evaluable pulses are detected despite proper electrical connection of the device	Impeller is blocked	<p>Deinstall the device from the pipe system. Check the unimpeded rotation of the impeller and, if necessary clean the device thoroughly</p> <p>Should these measures fail to remedy the malfunction return the device to the manufacturer according to  <i>Chapter 9.5 "Return Materials" on page 37</i></p>	Qualified personnel



## 8 Maintenance

### 8.1 Maintenance table

Maintenance interval / Removal and replacement of defective parts


**⚠ WARNING**

Disassembling the device is prohibited! Disassembling the device will void the warranty!

**⚠ WARNING**

Disassembly and replacement of defective parts may only be performed by the manufacturer! Only maintenance work is allowed, which does not require disassembly.



*The device must be returned to the manufacturer for maintenance work requiring disassembly! For further information see  Chapter 9.5 “Return Materials” on page 37*

The following maintenance work can be done without disassembling the device:

Interval	Maintenance work	Personnel
As required	Check for unrestricted rotation of the impeller	Qualified personnel
	Check the device for any signs of leakage	Qualified personnel
	Clean the device	Qualified personnel

## 9 Disassembly and disposal

After its period of useful life, the device must be disassembled and disposed of in an environmentally safe manner.

The flowmeter must first be removed from the pipe system before performing maintenance.

### 9.1 Safety

**⚠ WARNING**

Risk of injury if disassembled incorrectly!

- Ensure that the site is sufficiently cleared before commencing work
- Always wear protective equipment when handling hazardous media residue
- Handle open, or sharp-edged components carefully
- Ensure that the workplace is orderly and clean! Components and tools that are lying about or on top of each other are potential causes for accidents
- Disassemble components professionally
- Secure components so that they do not fall or overturn
- If in doubt, contact the manufacturer

Media residue, sharp edged components, pointed ends and corners on and in the device or on tools may cause injury.

### 9.2 Removal from the pipe system

**⚠ WARNING**

Risk of injury from pressurized lines!

- Depressurize the system before removing the device

Severe injury may result if the pipe system is under pressure when removing the device.

**⚠ WARNING**

Risk of injury from hot or cold surfaces!

- Before removing the device, ensure that the machine or system and the flow monitor have been controlled to a temperature range between 0 °C and 40°C / 32 °F and 104°F
- Do not touch any part of the machine or system that is either very hot or very cold
- Always wear heat-resistant/cold-resistant protective work clothing and protective gloves when working near hot/cold surfaces

Pipelines can heat up/cool down dramatically due to the media flowing through them. Skin contact with hot or cold surfaces causes severe skin burn or frostbite.

**⚠ WARNING**

**Risk of injury from media in the pipe system!**

- Before removing the device, ensure that the pipe system is empty and does not contain media residue
- Always wear personal protective equipment when removing the device

If the pipe system contains hazardous media, severe injury may be caused by escaping media.

**⚠ WARNING**

**Risk of injury from media residue in the device!**

- When removing (de-installing the device from the pipe system), always wear personal protective equipment.
- All requirements specified in the media safety data sheet must be observed in accomplishing the work task.
- Residue of hazardous media in the device can result in serious injury.

After the pipe system has been emptied, media residue may still be present inside the device. In the case of hazardous media, this could result in serious injury.

**Removal from the pipe system****⚠ WARNING**

**When removing the device from the system, do not exert excessive force as it may damage the device housing.**

**Personnel:**

- Qualified personnel

**Protective equipment:**

- Additional protective equipment must be worn when handling hazardous media!
- Protective gloves
- Goggles

**Tools:**

- Pipe wrench (preferably with 90° jaw position)
- Fixed spanner

1. ➔ Remove the device from the pipe system by loosening the adapter union that is holding the device. To aid removal, grip the device **carefully** with the pipe wrench.
2. ➔ Ensure the device is secured against falling and repeat step 1 on the opposite adapter union.

**9.3 Disassembly**

Before disassembly:

- Dispose of any operating materials and auxiliary materials in an environmentally safe manner

**NOTICE**





**Disassembling the device is not allowed other than for disposal purposes.**

**Personnel:**

- Qualified personnel

**Protective equipment:**

- Additional protective equipment must be worn when handling hazardous media!
- Protective gloves
- Goggles

1.  Remove the device from the pipe system
2.  Disassemble the device
3.  Clean components and remove media residue
4.  Dispose in an environmentally safe manner

## 9.4 Disposal

If no return or disposal agreement has been made, recycle disassembled components:

- Scrap metals
- Recycle plastic elements
- Dispose of the remaining components according to their material properties

**NOTICE**

**Danger to the environment due to incorrect disposal!**

- **Have electrical scrap, electronic components, lubricants and other supplies disposed of by approved specialists**
- **In case of doubt, obtain information on environmentally safe disposal from the local authority or special disposal expert**

**Potential risk to the environment may arise due to incorrect disposal.**

## 9.5 Return Materials

### 9.5.1 Return Materials Authorization

For products being returned, regardless of the reason, the currently valid provisions of the returns policy set by MEISTER will apply. Return shipments which do not comply with the returns policy may be refused by MEISTER at the expense of the consignor.

# 10 Technical data

## 10.1 General specifications

Table 4: Operating data

<b>Operating pressure</b>	10 bar / 144 psi
<b>Burst pressure (22°C / 71 °F)</b>	> 30 bar / 434 psi
<b>Operating temperature</b>	0 °C - 80 °C / 32 °F - 175 °F
<b>Measuring accuracy</b>	± 2 % of measured value <sup>(1)</sup>
<b>Repeatability</b>	< ± 0,8 % of measured value <sup>(1)</sup>
<b>Viscosity range</b>	1 - 10 cSt
<b>Sensing principle</b>	Hall effect, contact-free measuring technique

<sup>(1)</sup>Under the same operating conditions

<b>Power supply</b>	4,5 - 24 V DC
<b>Output signal</b>	Square pulses / Push-pull output
<b>Max. output current (at 24 V)</b>	11 mA
<b>Electrical connection</b>	Round cable (1m) 3 x 0,14mm <sup>2</sup> LIYY

Table 5: Measuring ranges (for H<sub>2</sub>O at 22 °C / 71 °F)

Type	l/h	Version
DHGF-2	1,5 - 100	POM
DHGF-2	1,5 - 100	ECTFE
DHGF-4	6 - 250	POM
DHGF-4	6 - 250	ECTFE

### 10.1.1 Installation data

Type	Materials	Thread	DN	Weight (g)
DHGF-2	POM	G 1/4"	8	ca. 45
DHGF-2	ECTFE	G 1/4" or 5/8" UNF	8	ca. 50
DHGF-4	POM	G 1/4"	8	ca. 45
DHGF-4	ECTFE	G 1/4" or 5/8" UNF	8	ca. 50

### 10.2 Pulse characteristics

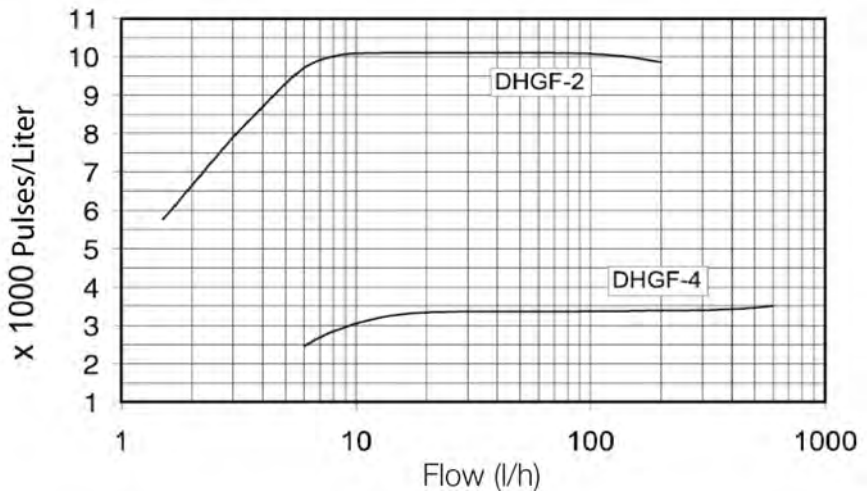


Fig. 5: Pulse characteristics

### 10.3 Device data plates

The primary device data plate is located on the side of the flowmeter and/or on the packaging and contains the following data:



Fig. 6: Primary device data plate

The secondary device data plate is located on the top cover of the mechanical part of the flowmeter and contains the following data:



Fig. 7: Secondary device data plate



## 10.4 Dimension sheet

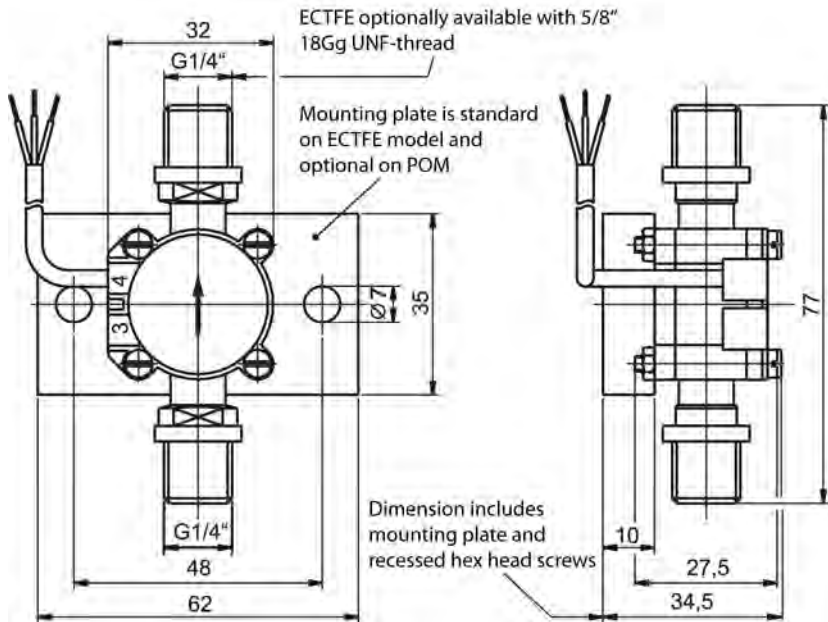


Fig. 8: Dimension sheet

# 11 Annex

## 11.1 Sealant



*Before using a sealant, ensure that it is compatible with the media used and that it can be employed under the given operating conditions.*

- Ensure proper seal
- Use a suitable sealant. Liquid sealants will damage the flowmeter
- Always follow the sealant manufacturer's instructions

## 12 Index

### A

Air pockets	
Cavitation . . . . .	22
Anti-corrosive fluids	
Anti-freeze fluids . . . . .	22
Application . . . . .	8

### C

Connection diagram . . . . .	27
Contact . . . . .	6
Copyright . . . . .	3
Correct use in accordance with these instructions . . . . .	8
Customer service . . . . .	6

### D

Device data plates . . . . .	40
Device description . . . . .	17
Dimension sheet . . . . .	41
Disassembly . . . . .	36
Disposal . . . . .	37

### E

Electrical connection . . . . .	25
Electrical data . . . . .	38
Environmental protection . . . . .	14
cleaning fluids . . . . .	14

### G

General	
safety . . . . .	7

### H

Handling of measurement units . . . . .	8
Hazard	
electrical current . . . . .	10
Hazards	
mechanical . . . . .	10
media . . . . .	12
radiation . . . . .	11
temperature . . . . .	11

### I

Initial startup . . . . .	25
Installation	
pipe system . . . . .	24
preparations . . . . .	22
sealing . . . . .	25

### L

Limitation of liability . . . . .	3
-----------------------------------	---

### M

Maintenance . . . . .	34
-----------------------	----

### O

Overview . . . . .	17
Owner . . . . .	15

### P

Packaging . . . . .	19
Precautions	
general . . . . .	9

Preparation		Storage . . . . .	20
device . . . . .	23	Symbols	
<b>R</b>		packaging . . . . .	20
Removal from the pipe system . . . .	35	Symbols used	
Return Materials Authorization . . . .	37	in the instructions . . . . .	7
<b>S</b>		<b>T</b>	
Safety		Transport inspection . . . . .	19
disassembly . . . . .	35	Troubleshooting guide . . . . .	32
Safety equipment . . . . .	13, 14	<b>U</b>	
Safety instructions		Unimpeded flow sections . . . . .	23
transport . . . . .	19	<b>W</b>	
Sealant . . . . .	42	Warranty and guarantee provisions . .	6
Service . . . . .	6		